

OPERATOR DOCUMENTATION

Stress Test Operator Manual

Complete guide for Brand Ambassadors — sensor setup, connecting to the dashboard, running sessions, and keeping the experience engaging.

What You Need

Confirm you have the following before the event starts.

Polar Optical Sensor Polar Verity Sense or Polar OH1 arm-band. Fully charged before use.	Laptop or Desktop PC Windows or macOS with Bluetooth — built-in or via USB dongle.
Google Chrome The dashboard requires Chrome. Bluetooth does not work in Safari or Firefox.	Bluetooth Enabled Switch Bluetooth on in your system settings before opening the dashboard.

IPHONE & IPAD

The dashboard must run on a laptop or Android device in Chrome. iPhones can still be used as the **mobile remote control** — see page 3.

Prepare & Wear the Sensor

The sensor must sit against the skin to read heart rate accurately.

01 Charge the sensor before the event

Attach the Polar sensor to its USB magnetic charger. A full charge takes **60–90 minutes** and will last all day. The LED pulses red while charging and turns solid green when complete.

02 Fit the band on the wrist or upper arm

The sensor works on the **wrist** (like a watch) or the upper arm — wrist is usually easiest at an event. Place the optical lens flat against the skin and tighten the band so it's snug with no room to slide. A loose sensor will give unreliable readings.

03 Power on the sensor

Press and hold the single button for **2 seconds** until the LED flashes green. The sensor begins advertising via Bluetooth automatically.

BETWEEN PARTICIPANTS


The sensor does not need to be powered off. Remove the band and pass it to the next person — the sensor will re-pair automatically when the next session starts.

Connect the Sensor to the Dashboard

Done once at the start of the event — not before every participant.

01 Open the dashboard in Google Chrome

Navigate to quadiant-stress-dashboard.vercel.app. You should see the idle screen below.

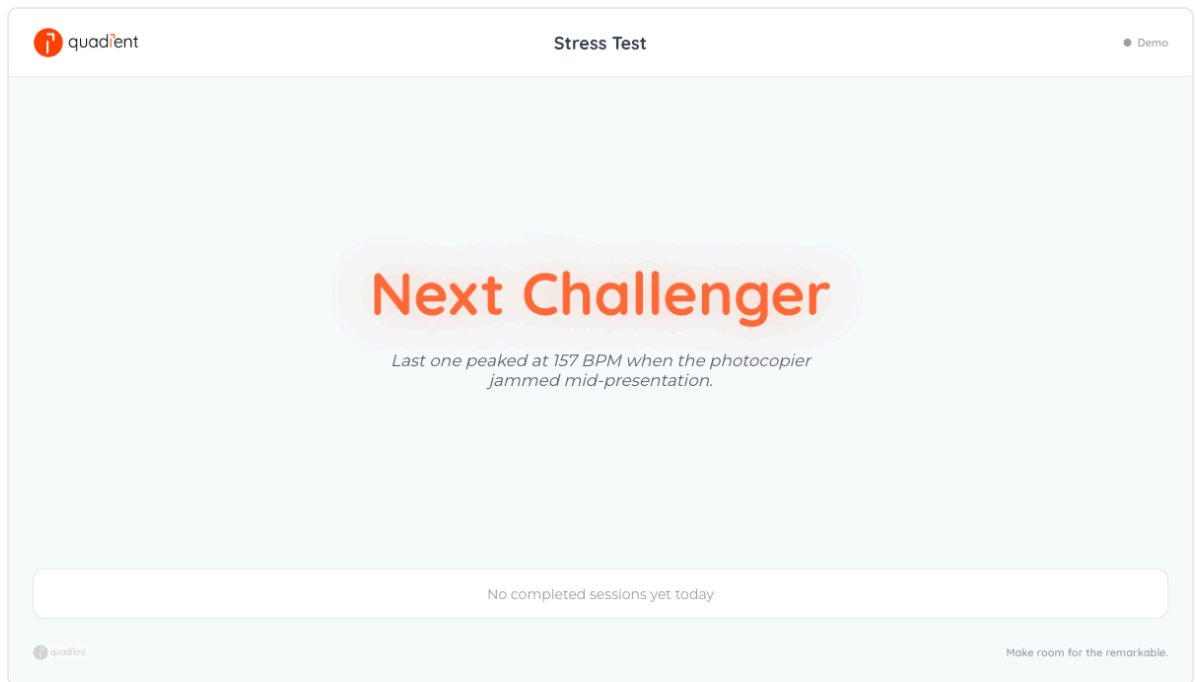

The dashboard idle screen — ready and waiting.

02 Open Operator Controls & select Polar Sensor

Press **Enter** on the keyboard (or click the Quadiant logo, top-left). In the panel that opens, click **Polar Sensor** — it will highlight in blue and the Connect Sensor button will become active.



Polar Sensor selected — Connect Sensor is now active.

03 Click Connect Sensor

Chrome will show a Bluetooth device picker. Ensure the sensor is powered on and being worn. Select the device named **Polar Sense...** or **Polar OH1...** and click **Pair**.

DEVICE NOT APPEARING?

Confirm the sensor is powered on and within 5 metres. Close the picker, click Connect Sensor again and wait 5–10 seconds.

04 Confirm the connection

The panel will show **Connected** along with the sensor's battery percentage. The header bar at the top of the dashboard will also update.

05 Start a session

Click **Start New Session** in Operator Controls — or use the mobile remote (see page 3). The waveform and BPM display will activate immediately.

For each new participant: click **End Session** then **Start New Session**. No need to reconnect Bluetooth each time.

BLUETOOTH RANGE — IMPORTANT

The participant must stay within **approximately 10 metres** of the laptop running the dashboard for a reliable connection. In a busy event space with crowds and obstacles, treat **5–8 metres** as the safe working range. If the participant roams further, the connection may drop — the dashboard will auto-reconnect, but readings will pause until they return to range. Position the laptop as close to the experience zone as possible.

Keeping the Experience Engaging

Stress responses are personal — these tools let you tune the experience in real time.


Some participants will barely change heart rate; others spike quickly. Neither is wrong. The two controls below let you make real-time adjustments so the display always looks dynamic and engaging.

Mobile Remote — Live BPM Nudge

Use any phone in Chrome to start sessions and push the heart rate display up or down.

01 Open the remote & unlock

Open **Google Chrome** on any phone and go to quadiant-stress-dashboard.vercel.app/?remote. Enter PIN **5014** and tap Unlock.

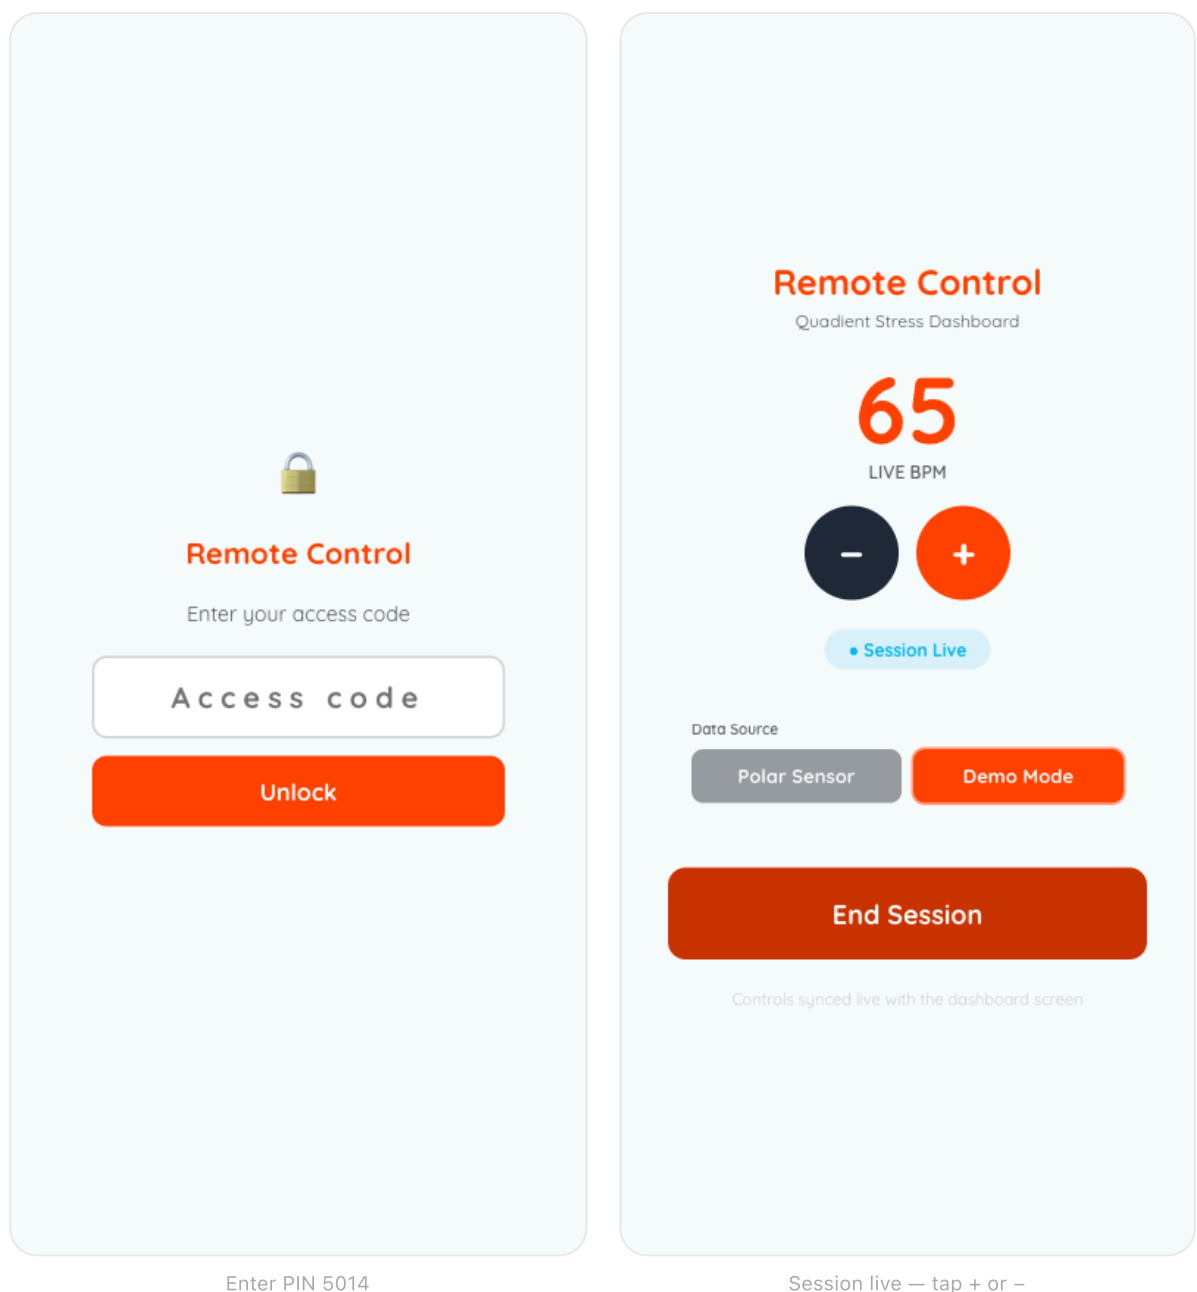

02 Start, stop, and nudge BPM


Tap **Start Session** to begin. Once live, the **+** and **–** buttons appear — each tap adjusts the displayed BPM by ± 2 , instantly reflected on the main screen. Use these whenever the experience feels flat to push the display into a higher zone.

Zone Sensitivity — Dashboard Setting

Controls how easily the display moves between colour zones. Adjust in Operator Controls at any time.

01 Open Operator Controls — find the slider

Press **Enter** (or click the Quadient logo). The **Zone Sensitivity** slider is in the middle of the panel.

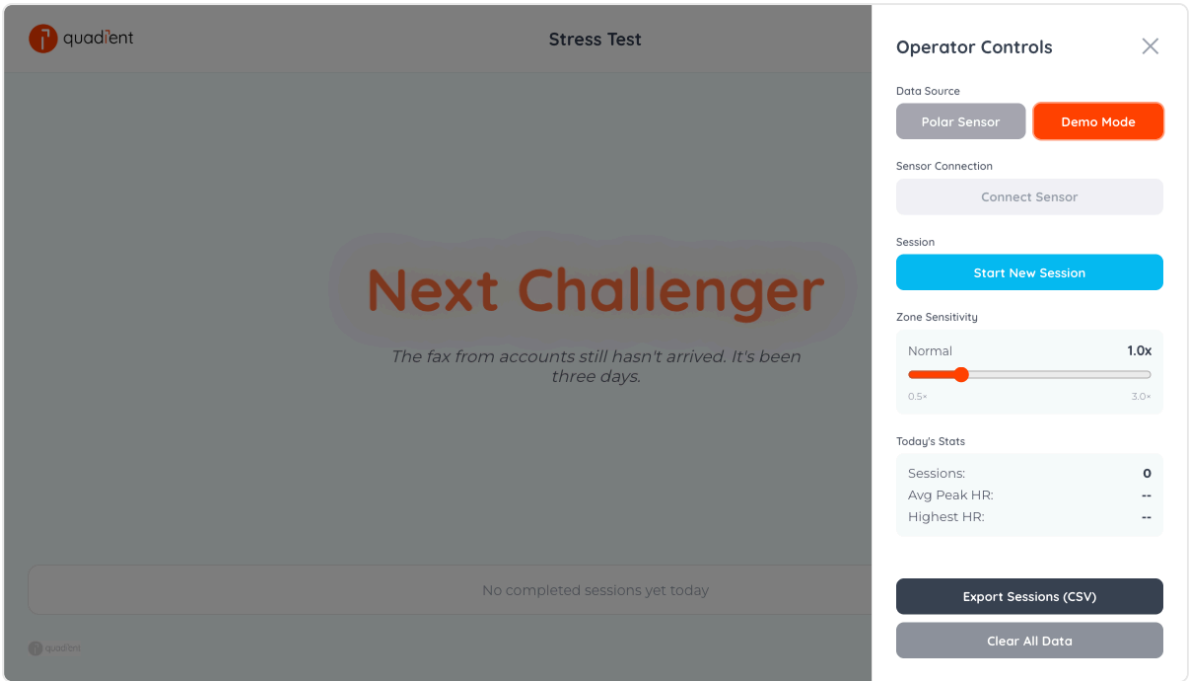

Default is 1.0x (Normal). Changes take effect immediately.

02 Choose the right setting

SETTING	HOW IT BEHAVES	BEST FOR
High (2x–3x)	Small HR rise triggers a zone change — reacts quickly	Calm participants whose BPM barely moves
Normal (1x)	Zones change at natural thresholds	Default — start here for everyone
Low (0.5x)	Larger HR rise needed to change zone	Participants already at a high resting rate

Tip: Start at 1x. If nothing is moving after 30 seconds, slide up to 2x or 3x.

Troubleshooting

PROBLEM	FIX
Device not showing in Bluetooth picker	Ensure sensor is powered on and within 5 metres. Close and reopen the picker.
Connection drops mid-session	Check the participant is within 5–8 metres of the laptop. The dashboard will auto-reconnect once back in range. If it doesn't, open Operator Controls and click Connect Sensor again.

BPM reading not moving	Check the sensor is snug against the skin. Use the + / – buttons on the mobile remote to manually adjust.
"Web Bluetooth not supported" error	Switch to Google Chrome. Bluetooth does not work in Safari or Firefox.
Remote shows invalid access code	Enter PIN 5014 . Ensure the URL includes ?remote at the end.