



quadient

OPERATOR DOCUMENTATION

Bluetooth Sensor Setup Guide

Step-by-step instructions for connecting a Polar heart rate sensor to the Quadient Stress Test dashboard, including pairing, session setup, and troubleshooting.

What You Need

Confirm you have the following before the event starts.

Polar Optical Sensor Polar Verity Sense or Polar OH1 arm-band. Fully charged before use.	Laptop or Desktop PC Windows or macOS with Bluetooth — built-in or via USB dongle.
Google Chrome or Microsoft Edge Web Bluetooth only works in these two browsers. Not Safari, not Firefox.	Bluetooth Enabled Switch Bluetooth on in your system settings before opening the dashboard.

IOS / IPHONE

Web Bluetooth is not available on iPhone or iPad. The dashboard must run on a laptop or an Android device in Chrome. iPhones can still be used as the **remote control** — see the remote control section of this guide.

Prepare & Wear the Sensor

The sensor must sit against the skin to read heart rate accurately.

01 Charge the sensor before the event

Attach the Polar sensor to its USB magnetic charger. A full charge takes **60–90 minutes** and will last all day. The LED pulses red while charging and turns solid green when complete.

02 Fit the band on the participant's upper arm

Slide the sensor pod into the arm-band strap. Position it on the **upper arm, 2–3 cm above the elbow**, with the optical lens facing inward against the skin. The band should be snug — not uncomfortable — with no room to slide a finger underneath.

03 Power on the sensor

Press and hold the single button for **2 seconds** until the LED flashes green. The sensor begins advertising via Bluetooth automatically. If the LED does not light, the battery is flat — charge before continuing.


The sensor does not need to be powered off between participants. Remove the band, pass it to the next person and the sensor will re-pair automatically when the next session starts.

Connect the Sensor to the Dashboard

This is done once at the start of the event — not before every participant.

01 Open the dashboard in Chrome or Edge


Navigate to **quadiant-stress-dashboard.vercel.app**. You should see the "Next Challenger" idle screen below.

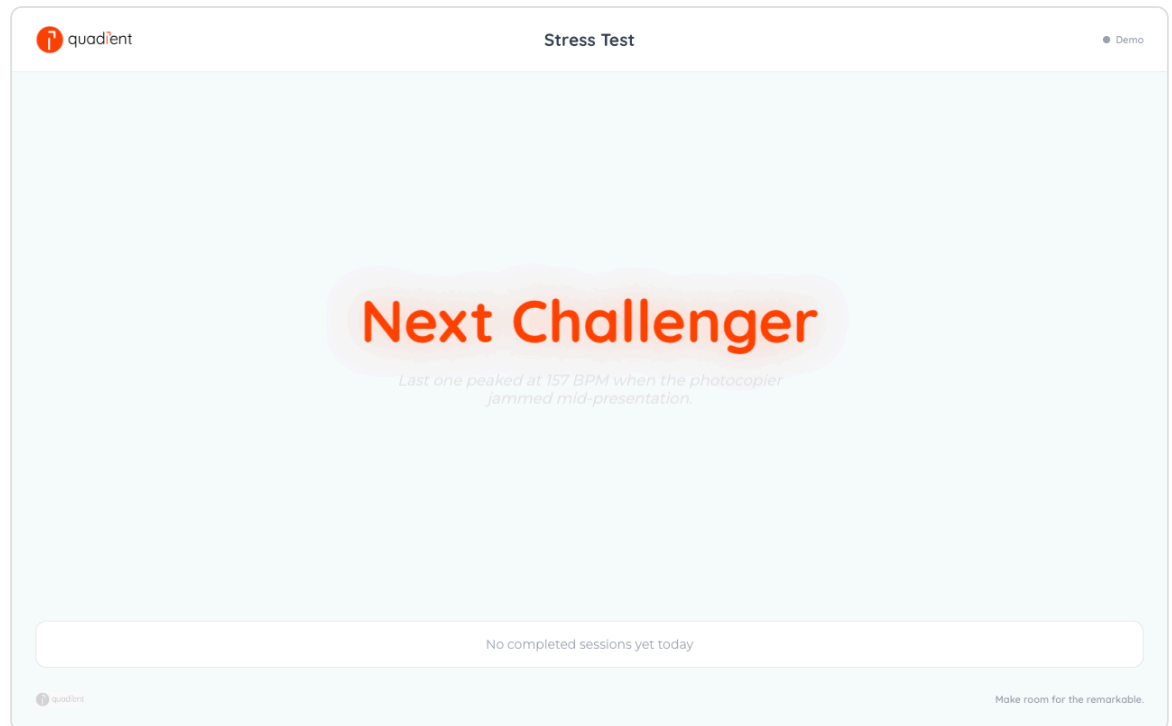

The dashboard idle screen — ready and waiting.

02 Open Operator Controls


Press **Enter** on your keyboard, or click the **Quadiant logo** in the top-left corner. A panel will slide in from the right.

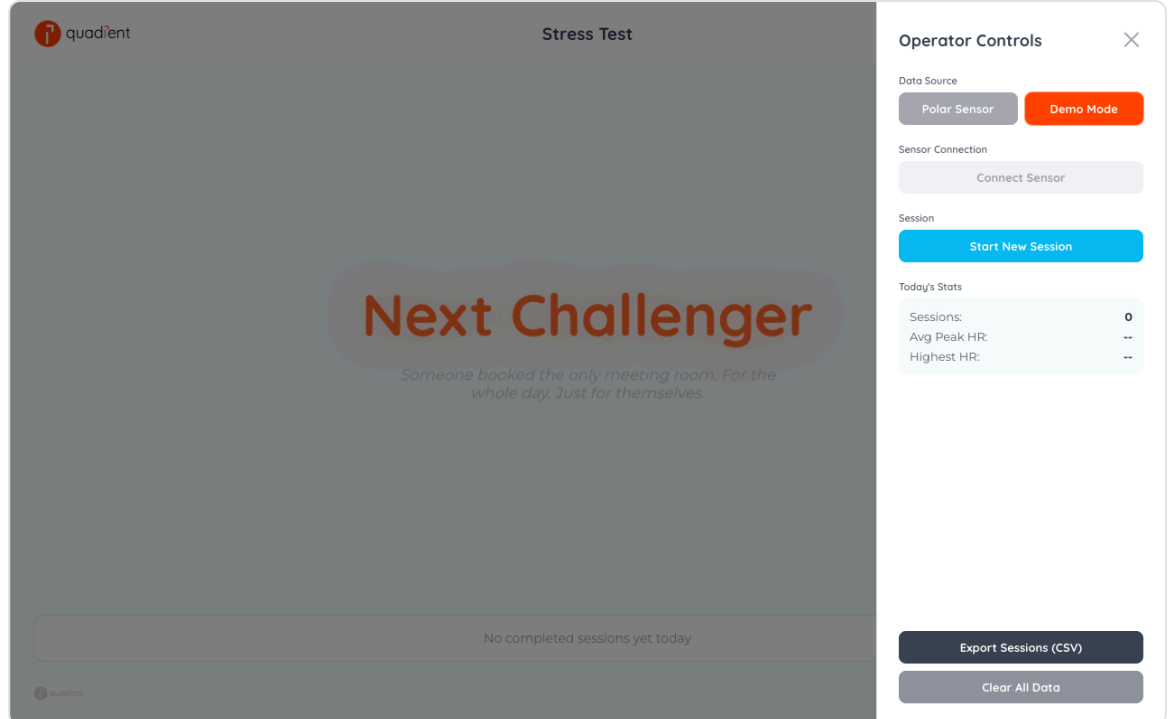

Operator Controls panel — Demo Mode is selected by default.

03 Select Polar Sensor as the data source

Under **Data Source**, click **Polar Sensor**. It will highlight in blue and the **Connect Sensor** button will become active.

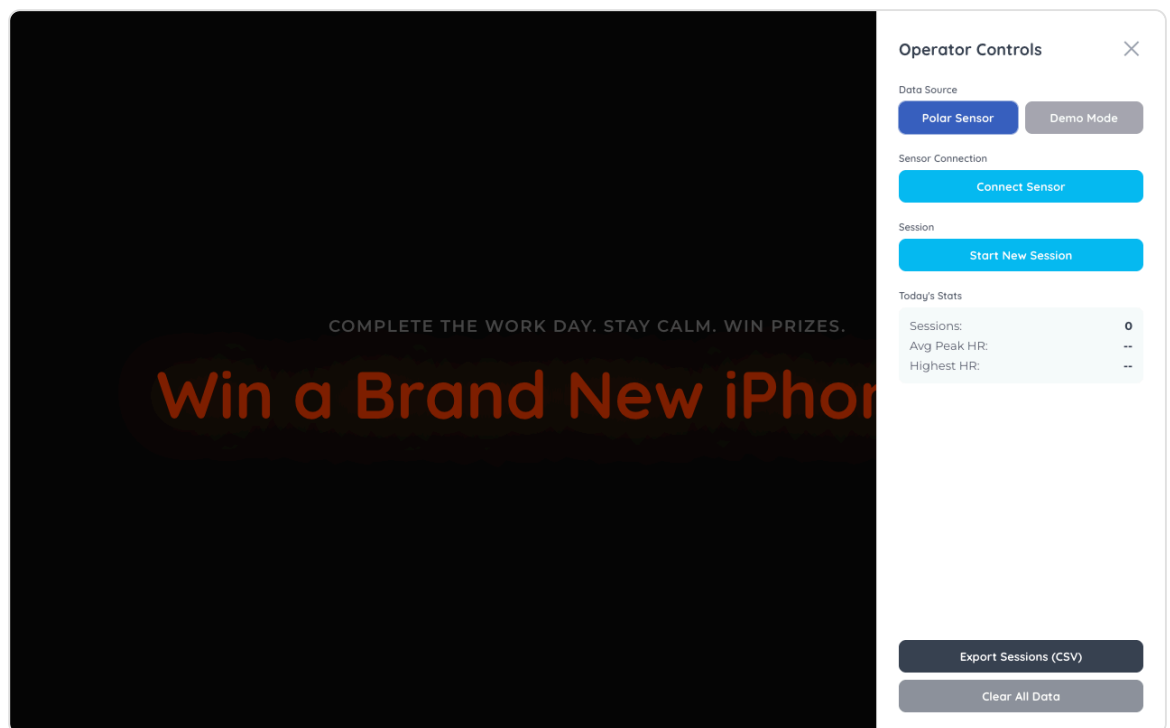

Polar Sensor selected — Connect Sensor is now active.

Pair and Start

Final steps to go live.

04 Click Connect Sensor

Chrome will display a **Bluetooth device picker**. Ensure the Polar sensor is powered on and being worn — it must be advertising before it appears in the list. Select the device named **Polar Sense...** or **Polar OH1...** and click **Pair**.

DEVICE NOT APPEARING?

Confirm the sensor is powered on and within 5 metres. Close the picker and click **Connect Sensor** again to re-scan. It can take 5–10 seconds to appear.

05 Confirm the connection

The panel will show **Connected** along with the sensor's battery percentage. The header bar at the top of the dashboard will also update.

06 Start a session

Click **Start New Session** in Operator Controls, or use the **mobile remote control** — open the dashboard URL on any phone, add **?remote** to the address, and enter PIN **5014**. The waveform and BPM display will activate immediately.

BETWEEN PARTICIPANTS

The sensor stays connected for the full event. For each new participant, click **End Session** then **Next Participant** — no need to reconnect Bluetooth each time.

Troubleshooting

Common issues on the day.

PROBLEM	FIX
Device not showing in Bluetooth picker	Ensure the sensor is powered on. Move it closer. Close the picker and click Connect Sensor again.

PROBLEM	FIX
Connection drops mid-session	The dashboard auto-reconnects. If it fails, open Operator Controls and click Connect Sensor again — the session will resume.
"Web Bluetooth not supported" error	Switch to Google Chrome or Microsoft Edge. Bluetooth does not work in Safari or Firefox.
BPM reading stuck or not moving	Ensure the sensor is snug against the skin. Use the + / – HR Override buttons on the mobile remote control to manually adjust the displayed value.
Sensor LED not lighting on power-on	Battery is flat. Connect to the USB charger for at least 30 minutes before the next use.
Remote control shows invalid access code	Enter PIN 5014. Ensure the URL has ?remote appended and you are on the correct dashboard address.